

DANCOVER[®]



Manual
for
Teepee Tent TentZing

Teepee Tent Instruction Guide

Hello, thanks for purchasing our Teepee Tent!

Here is a golden rule to help you get years of use out of your tent:

ALWAYS, WITHOUT FAIL, STORE YOUR TENT BONE DRY OR YOU WILL RUN THE RISK OF GETTING A MOULDY TENT!

Content List

3m/4m/5m Teepee Tent

THE CONTENTS SHOULD BE AS FOLLOWS:

1 x Carrybag

1 x Canvas Tent


1 x Galvanized Steel Center Pole

26 x Pin Pegs

14 x Guy Ropes & Sliders

1 x Repair Patch

PUTTING YOUR TENT UP

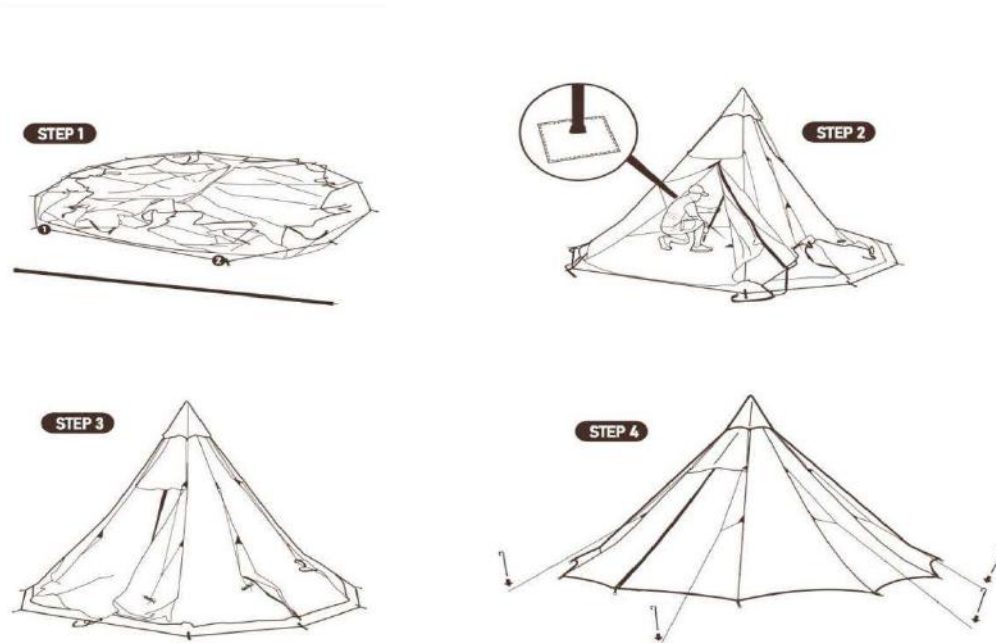

1) Lay out the groundsheet, rotate it so the door is facing the desired direction and pin it down tightly with pin pegs.

2) Take out the metal center pole and extend it. Unzip the door and take the center pole with rubber stoppers at each end inside the tent. Find the top/center of the tent and match it with the end of the pole. Then pull the pole in and up so you raise the roof of the tent.

3) Zip up the door and adjust the guy rope slider so you have approximately 50cm of loop to the peg. This allows adjustment in both directions.

4) Use the rest of the pegs to attach the guy ropes around the whole tent without putting any of them too much tension. All the guy ropes need to follow the seam lines in the roof. Get all the pegs in then go round adjusting the guy ropes to create the desired tension. Tie down the elastic tie with the pegs to cover the groundsheet zip.

Enjoy your teepee tent and please remember, only store it bone dry!

Contact information

Austria



Belgium



Croatia



Denmark



Estonia



Finland



France



Germany



Ireland



Italy



Latvia



Lithuania



Nederland



Norway



Poland



Portugal



Spain



Sweden



Switzerland



UK

