

MODULARO

Manual

for

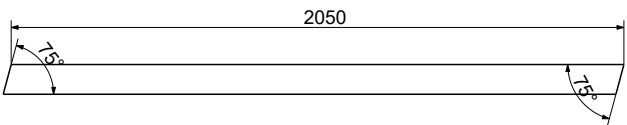



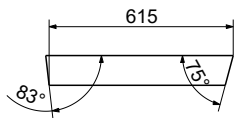
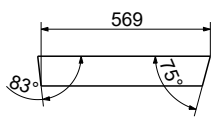
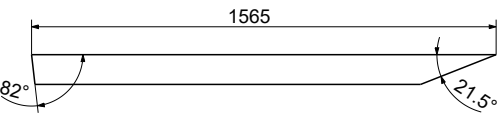
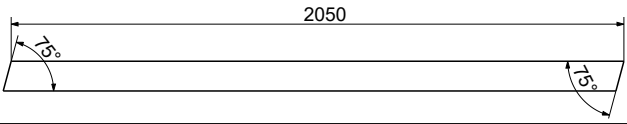






Wooden Shelter Montane

w/Roofing Felt



2,4x3x1,95 m

Materials



Dimensions
in mm

Part no.		Dim.	No.
1		50x100	2 pcs.
2		50x100	2 pcs.
3		50x100	2 pcs.
4		50x100	2 pcs.
5		50x100	2 pcs.
6		50x100	2 pcs.
7		50x100	2 pcs.
8		50x100	2 pcs.
9		30x145 Floor boards	15 pcs.
10		19 x 200-250 Roof boards	28 pcs.
11		50x100	8 pcs.
12		Screws 5x180	40 pcs.
13		Screws 4,5x60	500 pcs.
14		Roofing felt 1m x 10m Nails	1 roll 170 pcs.

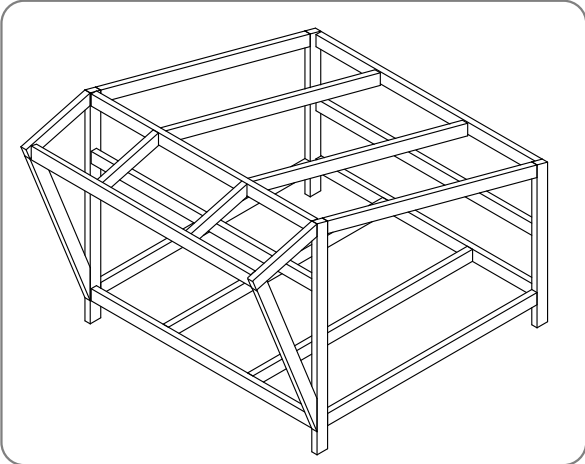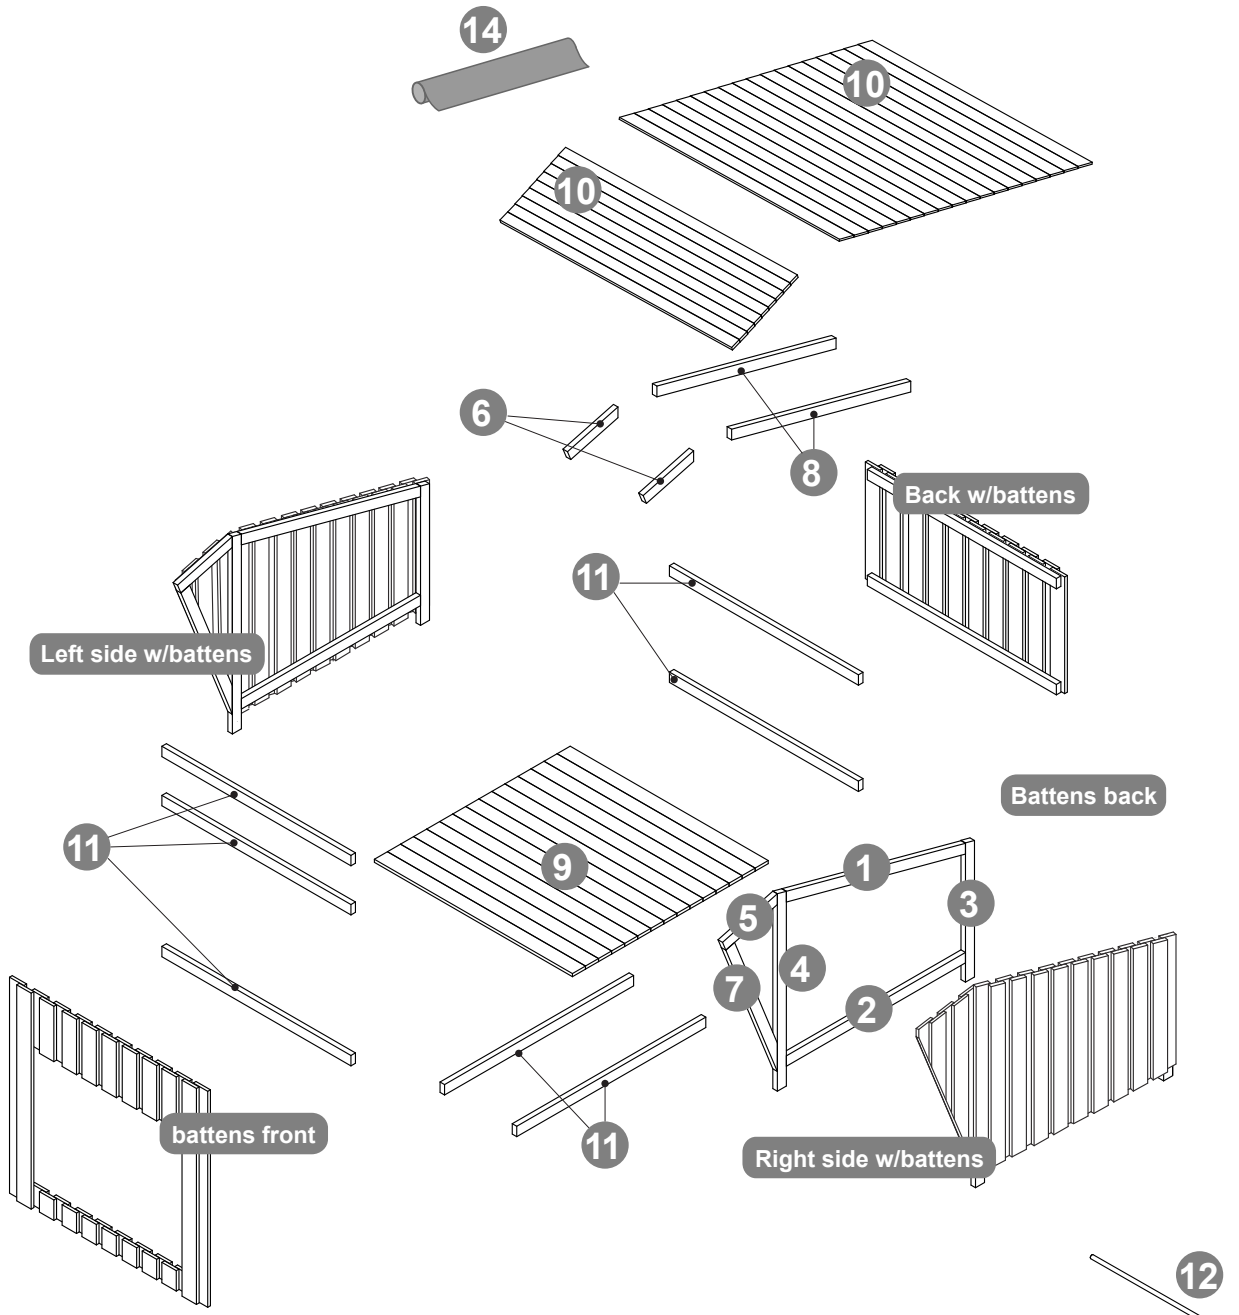Shelter assembly




Shelter assembly

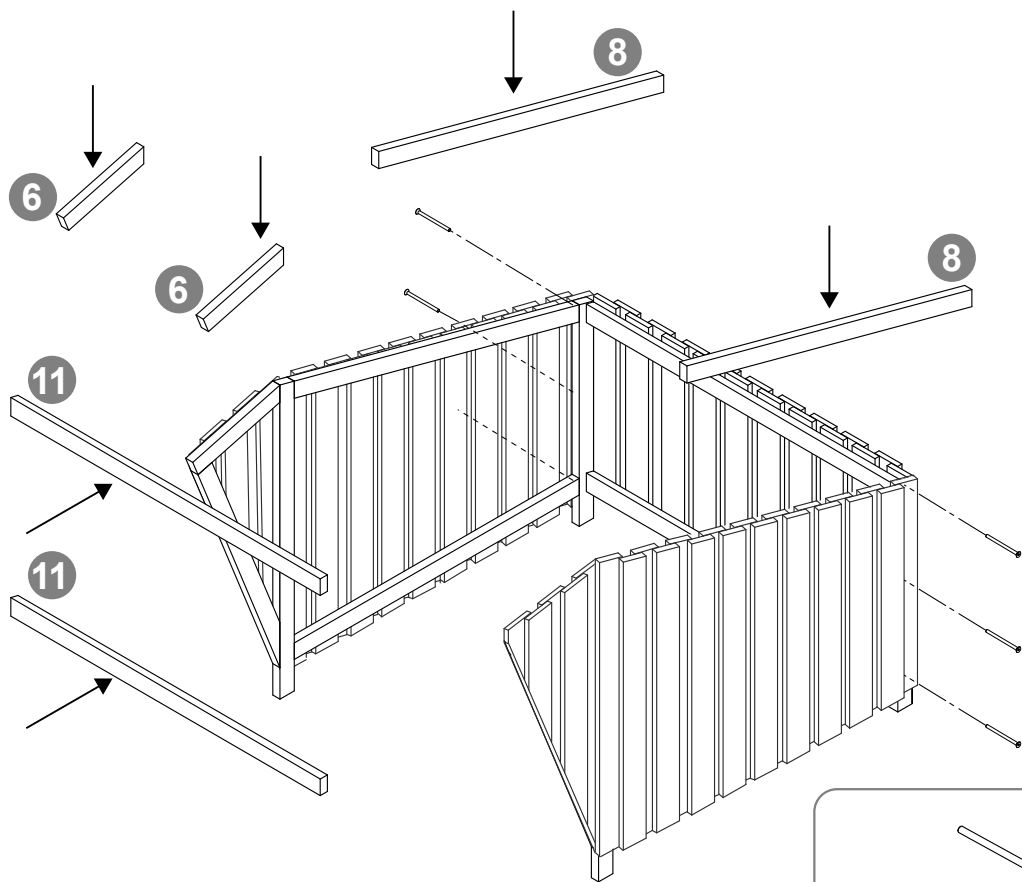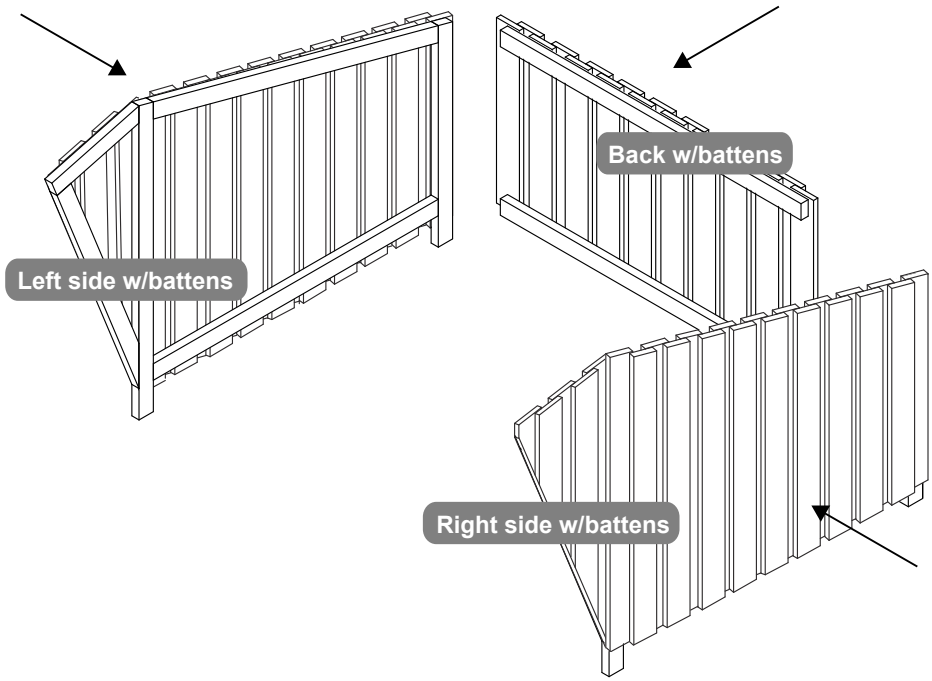


12

Screws: 6 pcs. 5x180mm

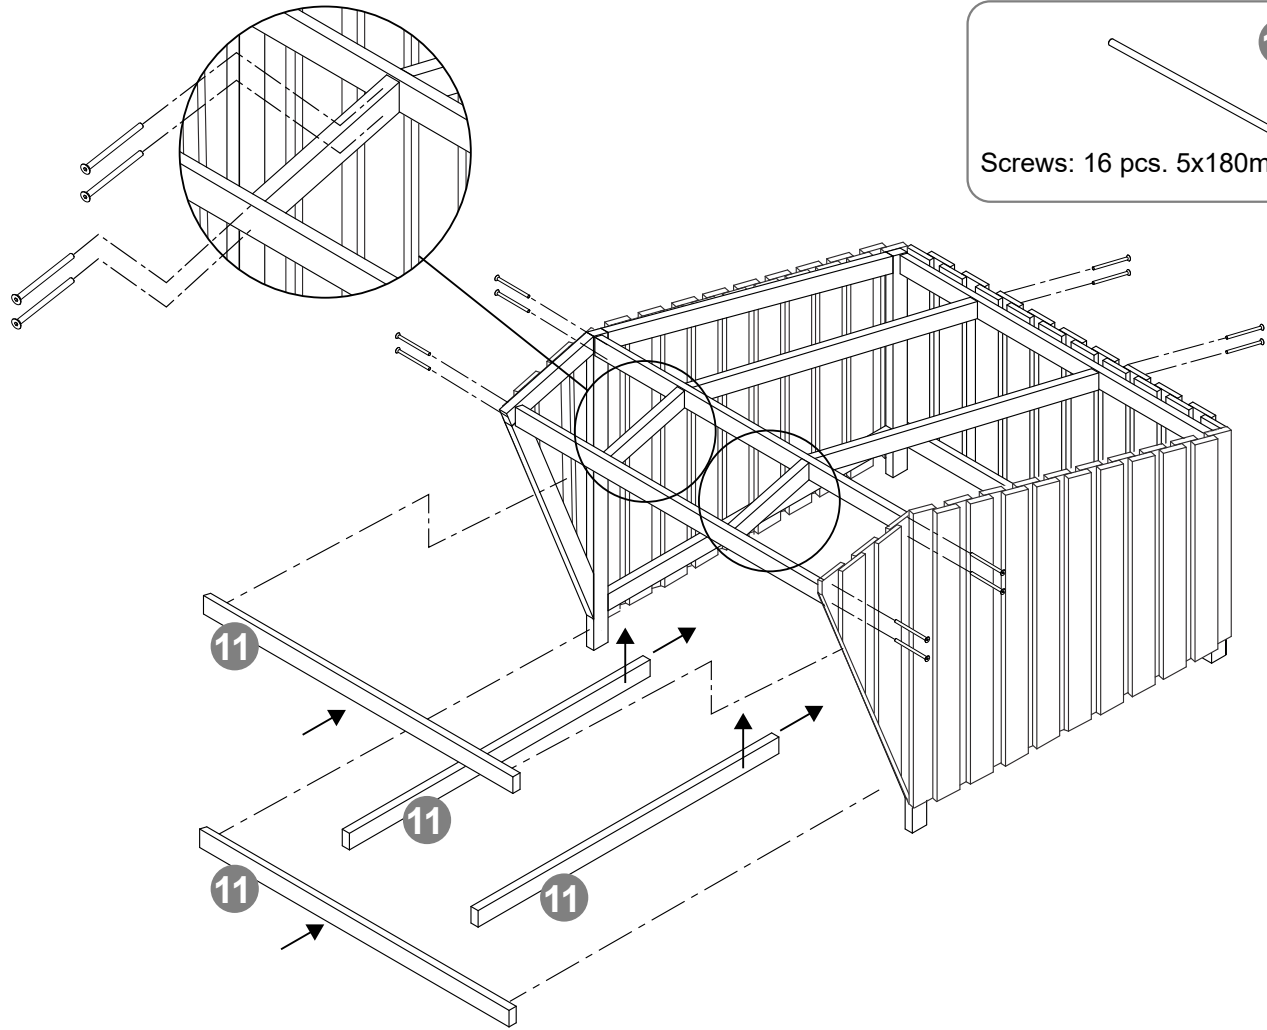
Shelter assembly



Floor installation



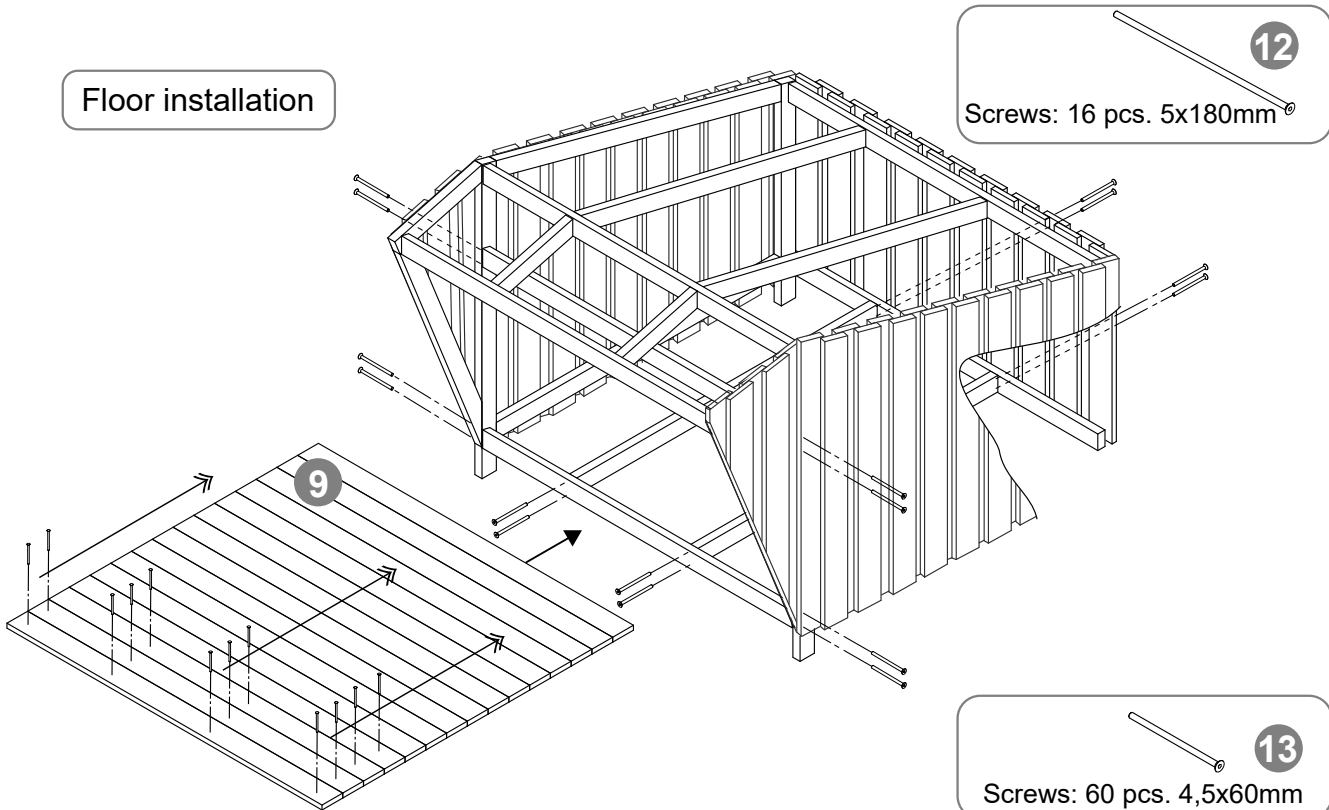


Shelter assembly



13

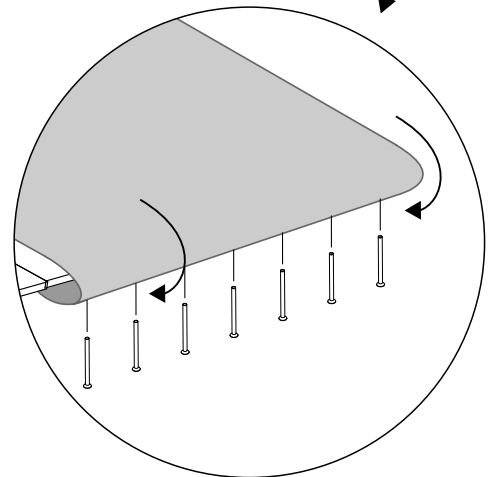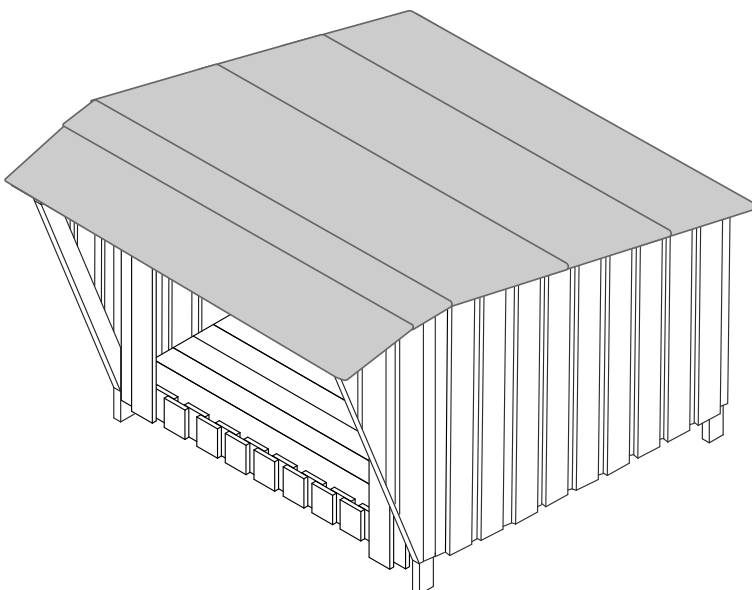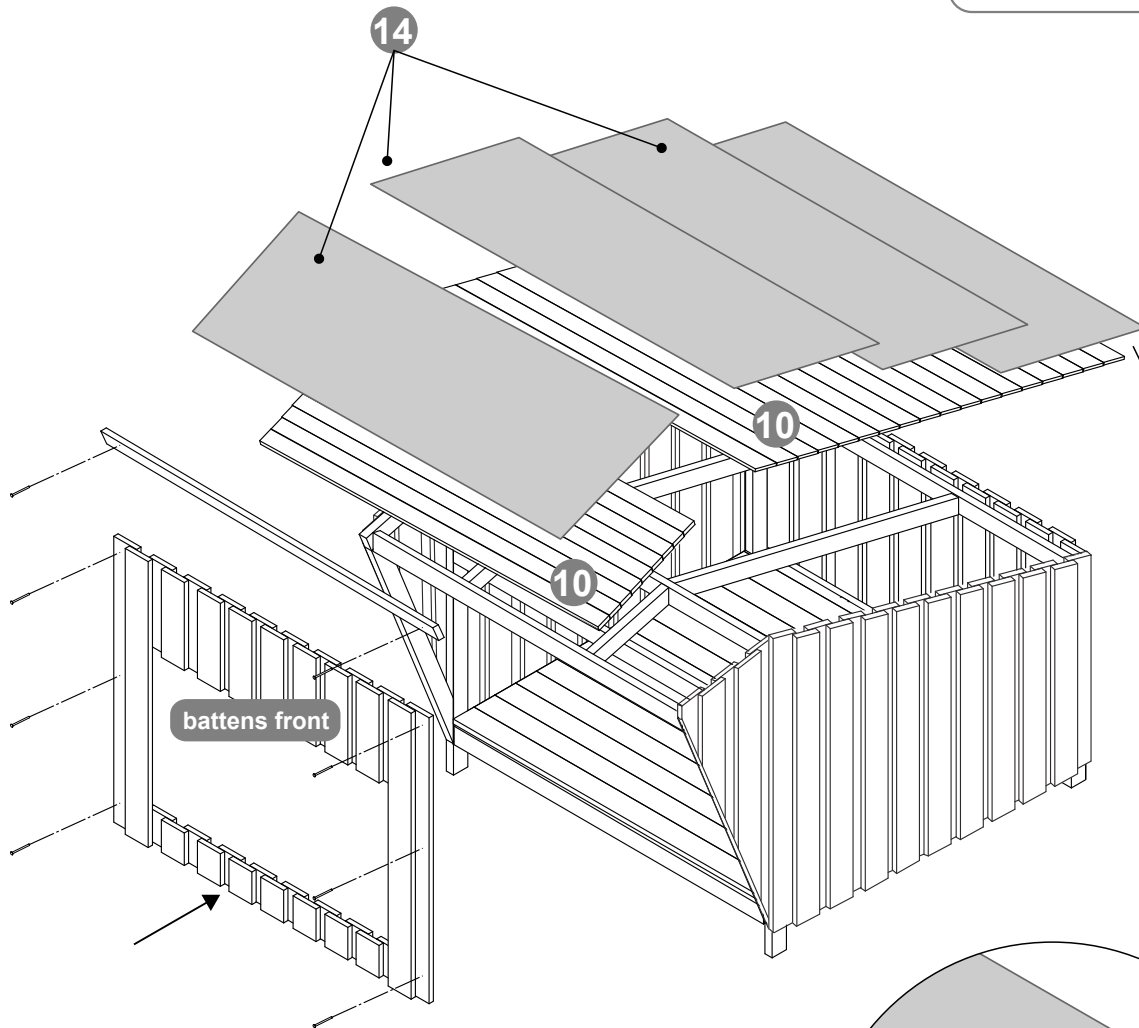Screws: 64 pcs.
4,5x60mm Nails: 170 pcs.



When applying the roofing felt make it go 5 cm over the edge on all four sides of the roof. Fold the roofing felt under the edge and fasten it with nails placed at 7 cm intervals.

Contact information

Head office:

Dancover A/S
Lyngevej 16A, Nørre Herlev
3400 Hillerød
Denmark

For more information
please visit:

www.dancovershop.com

National contact

Denmark:

denmark@dancover.com

UK:

uk@dancover.com

Germany:

germany@dancover.com

France:

france@dancover.com

Sweden:

sverige@dancover.com

Finland:

suomi@dancover.com

Poland:

polska@dancover.com

Luxembourg:

luxembourg@dancover.com

Portugal:

portugal@dancover.com

Spain:

espana@dancover.com

Italy:

italia@dancover.com

Switzerland:

schweiz@dancover.com

Austria:

austria@dancover.com

Norway:

norge@dancover.com

Nederland:

nederland@dancover.com

Ireland:

ireland@dancover.com

Belgium:

belgique@dancover.com